

Ortofon Stylus Brush - Fibre

Šifra: 17553

Kategorija proizvoda: Dodatna oprema za gramofone

Proizvođač: Ortofon

Cena: 31,00 KM



Use the brush in the forward direction from the rear of the cartridge towards the stylus tip and never from stylus tip to the rear of the cartridge and never from side to side. Following this treatment there will normally be no need for further stylus cleaning.